



MEDICAL GAS CHECK VALVE

SPECIFICATIONS:

The Medical Gas Check Valve shall be an Amico **Alert-1** series.

The check valve body shall be made of bronze. It shall have a positive shut-off with a self-aligning spring loaded plunger which shall mate with a soft seat.

The valve shall have a straight through design, for minimum pressure drop.

The check valve shall be vibration free and fast acting for silent operation.

Each check valve shall be cleaned for oxygen service.

Amico products comply with NFPA-99.




FEATURES:

- Cleaned for medical gas service.
- Individually packaged and capped.
- Low pressure drop.
- Positive seal and silent operation.
- Spring loaded (for vertical mounting).
- 1/2" to 3" size available.
- 400 psig WOG.


PROJECT:

D I M E N S I O N S

A Series
ALERT-1

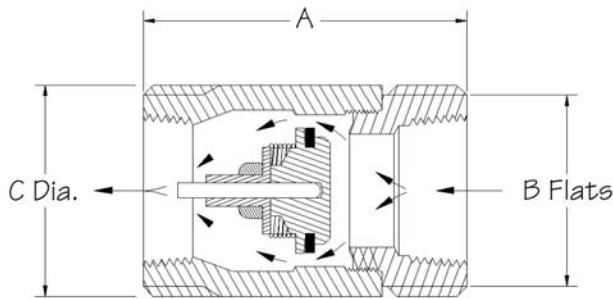

1/2" to 2" Check Valves

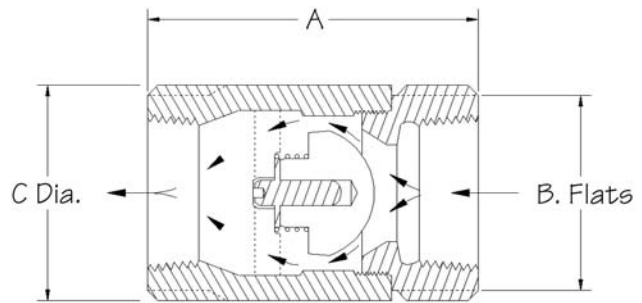

2 1/2" and 3" Check Valves

O R D E R I N G I N F O R M A T I O N

Units of measure: inch [mm]

MODEL #	VV-CHK- -05	VV-CHK- -07	VV-CHK- -10	VV-CHK- -12	VV-CHK- -15	VV-CHK- -20	VV-CHK- -25	VV-CHK- -30
SIZE	1/2" [12.7]	3/4" [19]	1" [25.4]	1-1/4" [41.7]	1-1/2" [38.1]	2" [50.8]	2-1/2" [63.5]	3" [76.2]
A	2-5/16" [58.7]	2-7/8" [73]	3-1/2" [88.9]	4-3/16" [106.4]	4-15/16" [125.4]	6" [152.4]	7" [177.8]	8-1/8" [206.4]
B FLATS	1-1/8" [28.6]	1-3/8" [34.9]	1-3/4" [44.5]	2-1/8" [54]	2-1/2" [63.5]	3" [76.2]	3-1/2" [88.9]	4-1/8" [104.8]
C DIA.	1-1/8" [28.6]	1-1/2" [38.1]	1-15/16" [49.2]	2-3/8" [60.3]	2-13/16" [71.4]	3-11/16" [93.7]	4-1/2" [114.3]	5-5/16" [134.9]
* CV	6	12	25	44	65	120	175	265

* The CV is defined as the US Gallons of water per minute that the valve will pass with a 1 Psi pressure drop.

D I S T R I B U T E D B Y :

A Corporation
AMICO 14 Madison Rd., Fairfield, NJ 07004 USA
85 Fulton Way, Richmond Hill, ON L4B 2N4 Canada

Tel: 1-877-GO AMICO (1-877-462-6426)
Fax: (905) 764-0862 www.amico.com

MAR-03